
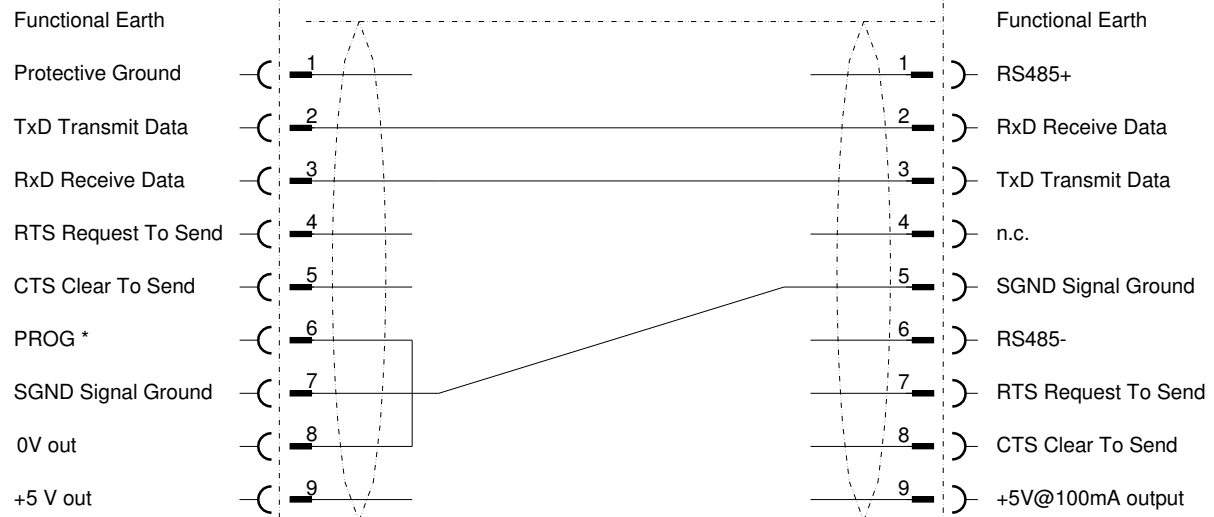


AC31 serie90  
RS232

CP400  
RS232

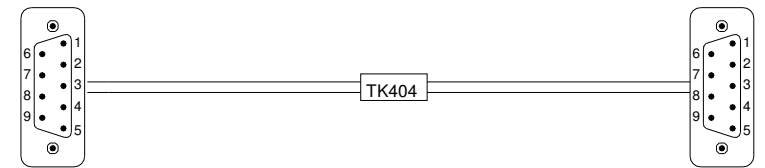

\* 1 = Active mode, Pin 6 open  
0 = Passive mode, Pin 6 shorted to 0V out