


only on CP522 and CP554
via Plug-In Block
RS485



AC500-eCo
via COM2
RS485



 AC500-eCo
via COM1
RS485




RS485 RxD/TxD-P

RS485 RxD/TxD-N

SGND Signal Ground

Functional Earth

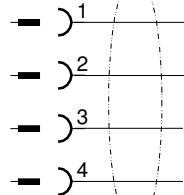


1 Terminator P

2 RS485 RxD/TxD-P

3 RS485 RxD/TxD-N

4 Terminator N

5 Functional earth

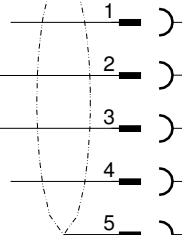

Functional Earth

1 FE Functional Earth

2 SGND Signal Ground

3 RS485 RxD/TxD-P

4 n.c.


5 SGND Signal Ground

6 +3,3 Volt

7 n.c.

8 RS485 RxD/TxD-N

9 n.c.

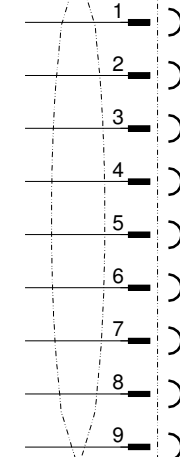

Artikelnummer:

Datum
08-03-2013

Schaal
N.v.t.

Klant

AC500eco CP554&CP552

AC500 eco RS485

Solar T.P.S.

Versie
A

Pagina
1 of 1